
OSRAM GW KAFGB9.KM **Datasheet**



SOLERIQ™ S 9

GW KAFGB9.KM

The SOLERIQ™ S products were specifically designed for applications requiring large flux packages out of a compact area.

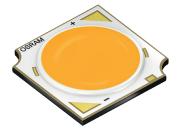



Applications

- Indoor Lighting

Features

- Package: Chip-on-Board

- Typ. Radiation: 120° (Lambertian emitter)

- Color temperature: 2700K - 6500K

- CRI: 90 (min.)

- ESD: 2 kV acc. to ANSI/ESDA/JEDEC JS-001 (HBM, Class 2)

- Luminous Flux: typ. 1045 lm @ 3000 K, 85 °C

- Luminous efficacy: typ. 170 lm/W @ 3000 K, 85 °C



Ordering Information			
Туре	Color temperature	Luminous Flux 1) $I_F = 180 \text{ mA}$ Φ_V	Ordering Code
GW KAFGB9.KM-A21-27S3	2700 K	915 1085 lm	Q65115A1927
GW KAFGB9.KM-B17-30S3	3000 K	970 1150 lm	Q65115A1926
GW KAFGB9.KM-B18-35S3	3500 K	980 1165 lm	Q65115A1896
GW KAFGB9.KM-B19-40S3	4000 K	990 1175 lm	Q65115A1925
GW KAFGB9.KM-B20-50S3	5000 K	995 1180 lm	Q65115A1924
GW KAFGB9.KM-B19-57S3	5700 K	990 1175 lm	Q65115A1923
GW KAFGB9.KM-B21-65S3	6500 K	985 1170 lm	Q65115A1922



Maximum Ratings				
Parameter	Symbol		Values	
Operating Temperature	T _{op}	min.	-40 °C	
	οp	max.	105 °C	
Storage Temperature	T _{stg}	min.	-40 °C	
	Sig	max.	105 °C	
Junction Temperature	T _j	max.	125 °C	
Forward Current	I _E	min.	20 mA	
$T_J = 85 ^{\circ}C$	•	max.	400 mA	
Reverse voltage 2)	V_R		Not designed for	
			reverse operation	
ESD withstand voltage	V_{ESD}		2 kV	
acc. to ANSI/ESDA/JEDEC JS-001 (HBM, Class 2)	205			



Characteristics

 $I_F = 180 \text{ mA}; T_J = 85 \text{ }^{\circ}\text{C}$

Parameter	Symbol		Values
Viewing angle at 50% $\rm I_{\rm v}$	2φ	typ.	120 °
Forward Voltage 3)	V_{F}	min.	30.00 V
$I_{\rm F} = 180 \text{mA}$	•	typ.	34.00 V
'		max.	38.00 V
Reverse current 2)	I _R		Not designed for reverse operation
Color Rendering Index 4)	CRI	min.	90
Electrical thermal resistance junction/solderpoint with efficiency η_e = 51.2 %	R _{thJS elec.}	typ.	0.52 K / W




Brightness Groups

Group	Luminous Flux ¹⁾ $I_F = 180 \text{ mA}$ min. Φ_V	Luminous Flux ¹⁾ $I_F = 180 \text{ mA}$ max. Φ_V
A21	915 lm	1085 lm
B17	970 lm	1150 lm
B18	980 lm	1165 lm
B21	985 lm	1170 lm
B19	990 lm	1175 lm
B20	995 lm	1180 lm



Chromaticity Coordinate Groups 5)

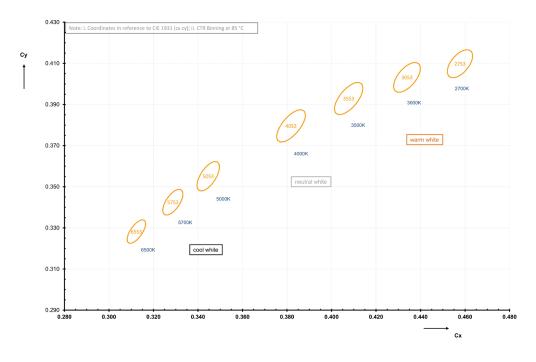


Chromaticity Coordinate Groups

	Center	Center			Ø
CCT	Сх	Су	а	b	
2700 K	0.4577	0.4098	0.008	0.0041	54.1
3000 K	0.4339	0.4032	0.0086	0.0042	53.7
3500 K	0.4077	0.3929	0.0093	0.0042	53.9
4000 K	0.3818	0.3796	0.0094	0.0041	53.4
5000 K	0.3446	0.3551	0.0081	0.0035	59.8
5700 K	0.3287	0.3425	0.0072	0.0032	58.8
6500 K	0.3123	0.3282	0.0066	0.0027	58.1




Relative Spectral Emission

 $\Phi_{rel} = f(\lambda); I_F = 180 \text{ mA}; T_J = 85 ^{\circ}\text{C}$

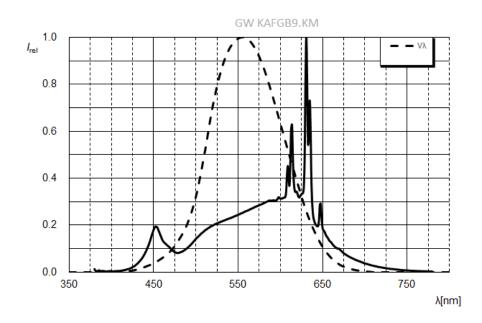

Radiation Characteristics


$$I_{rel} = f(\phi); T_J = 85 °C$$

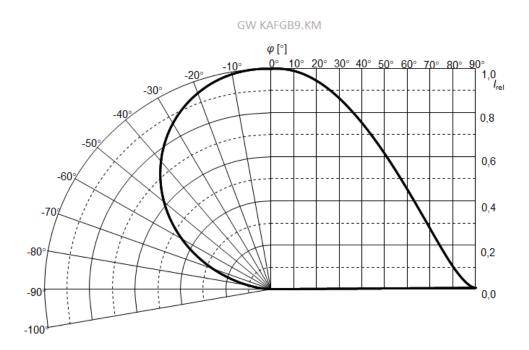




Forward current

 $I_{E} = f(V_{E}); T_{L} = 85 \, ^{\circ}C$

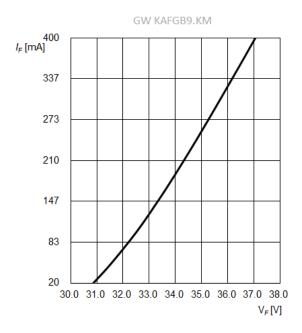


Relative Luminous Flux

 $\Phi_{V}/\Phi_{V}(180 \text{ mA}) = f(I_{F}); T_{J} = 85 \text{ }^{\circ}\text{C}$

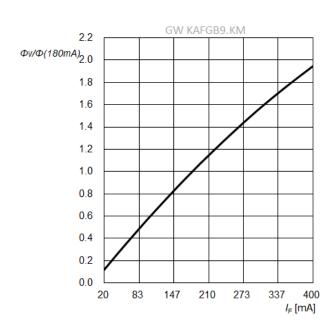


Chromaticity Coordinate Shift ΔCx , $\Delta Cy = f(I_F)$; $T_J = 85 \, ^{\circ}C$

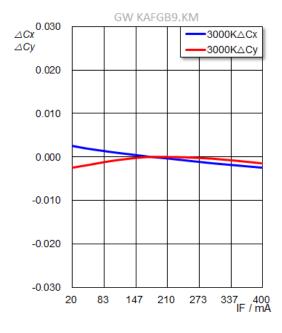




Forward Voltage

$$\Delta V_{F} = V_{F} - V_{F}(85 \text{ °C}) = f(T_{i}); I_{F} = 180 \text{ mA}$$

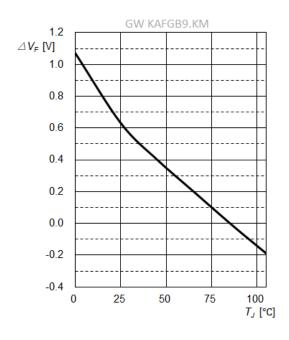


Relative Luminous Flux

 $\Phi_{v}/\Phi_{v}(85 \text{ °C}) = f(T_{i}); I_{F} = 180 \text{ mA}$

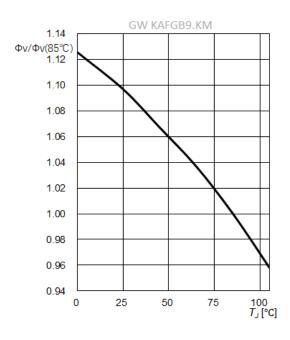

Chromaticity Coordinate Shift


 ΔCx , $\Delta Cy = f(T_i)$; $I_F = 180 \text{ mA}$

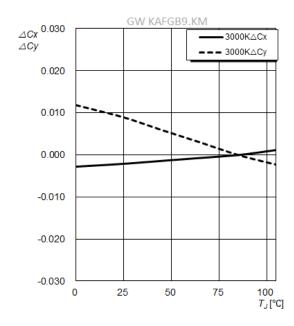



Max. Permissible Forward Current


 $I_{\scriptscriptstyle F} = f(T)$

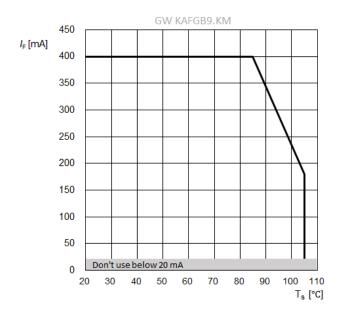





Dimensional Drawing 6)

Marking on backside of COB device

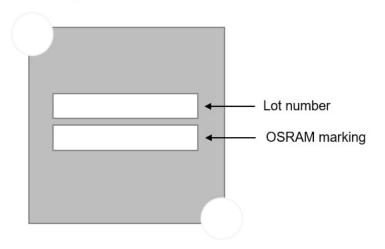

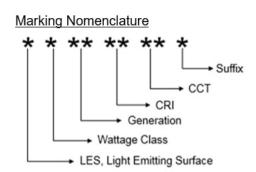

Dimensional Drawing 6)

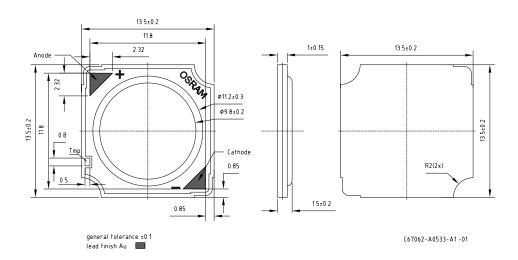


Further Information:

Approximate Weight: 494.5 mg




Tray 6) 50 pieces per tray

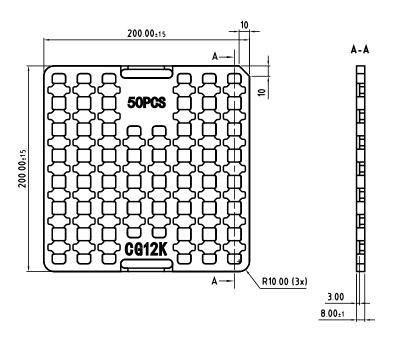

C67062-A0325-X1-02

Barcode-Product-Label (BPL)

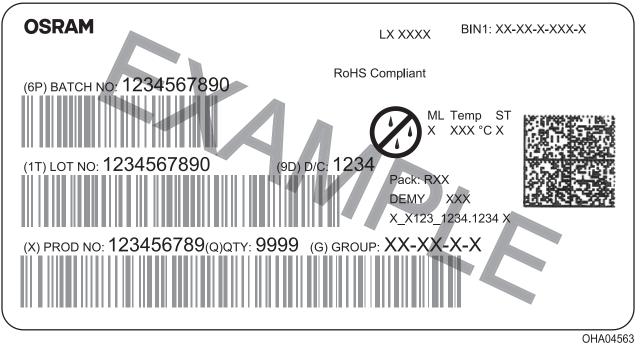



Notes

The evaluation of eye safety occurs according to the standard IEC 62471:2006 (photo biological safety of lamps and lamp systems). Within the risk grouping system of this IEC standard, the device specified in this data sheet fall into the class moderate risk (exposure time 0.25 s). Under real circumstances (for exposure time, conditions of the eye pupils, observation distance), it is assumed that no endangerment to the eye exists from these devices. As a matter of principle, however, it should be mentioned that intense light sources have a high secondary exposure potential due to their blinding effect. When looking at bright light sources (e.g. headlights), temporary reduction in visual acuity and afterimages can occur, leading to irritation, annoyance, visual impairment, and even accidents, depending on the situation.

Subcomponents of this device contain, in addition to other substances, metal filled materials including silver. Metal filled materials can be affected by environments that contain traces of aggressive substances. Therefore, we recommend that customers minimize device exposure to aggressive substances during storage, production, and use. Devices that showed visible discoloration when tested using the described tests above did show no performance deviations within failure limits during the stated test duration. Respective failure limits are described in the IEC60810.

This device is designed for specific/recommended applications only. Please consult OSRAM Opto Semiconductors Sales Staff in advance for detailed information on other non-recommended applications (e.g. automotive).

Change management for this component is aligned with the requirements of the lighting market.

For further application related information please visit https://ams-osram.com/support/application-notes



Disclaimer

Attention please!

The information describes the type of component and shall not be considered as assured characteristics. Terms of delivery and rights to change design reserved. Due to technical requirements components may contain dangerous substances.

For information on the types in question please contact our Sales Organization.

If printed or downloaded, please find the latest version on our website.

Packing

Please use the recycling operators known to you. We can also help you – get in touch with your nearest sales office. By agreement we will take packing material back, if it is sorted. You must bear the costs of transport. For packing material that is returned to us unsorted or which we are not obliged to accept, we shall have to invoice you for any costs incurred.

Product and functional safety devices/applications or medical devices/applications

Our components are not developed, constructed or tested for the application as safety relevant component or for the application in medical devices.

Our products are not qualified at module and system level for such application.

In case buyer – or customer supplied by buyer – considers using our components in product safety devices/ applications or medical devices/applications, buyer and/or customer has to inform our local sales partner immediately and we and buyer and /or customer will analyze and coordinate the customer-specific request between us and buyer and/or customer.



Glossary

- Brightness: Brightness values are measured during a current pulse of typically 10 ms, with a tolerance of +/- 7%.
- 2) Reverse Operation: Not designed for reverse operation. Continuous reverse operation can cause migration and damage of the device.
- Forward Voltage: The Forward voltage is measured during a current pulse duration of typically 1 ms with a tolerance of $\pm 0.05V$.
- Color reproduction index: Color reproduction index values (CRI-RA) are measured during a current pulse of typically 10 ms and with a tolerance of ±2.
- Chromaticity coordinate groups: Chromaticity coordinate groups are measured during a current pulse duration of typically 10ms with a tolerance of ±0.005.
- Tolerance of Measure: Unless otherwise noted in drawing, tolerances are specified with ±0.1 and dimensions are specified in mm.



Revision History

Version	Date	Change
1.0	2025-08-11	Initial Version
1.1	2025-10-15	Characteristics Brightness Groups Features



EU RoHS and China RoHS compliant product 此产品符合欧盟 RoHS 指令的要求; 按照中国的相关法规和标准, 不含有毒有害物质或元素。

Published by ams-OSRAM AG

Tobelbader Strasse 30, 8141 Premstaetten, Austria Phone +43 3136 500-0 ams-osram.com © All rights reserved



